

 


#YourGearUpgraded

TV STAND

Model **EGTV1**

INSTRUCTION MANUAL

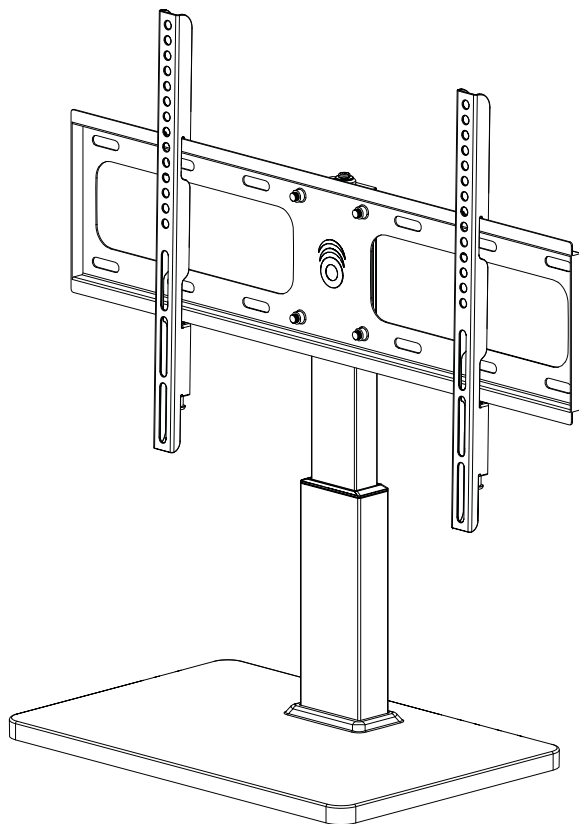

IMPORTANT SAFETY INSTRUCTIONS. READ ENTIRE MANUAL PRIOR TO USE. SAVE THESE INSTRUCTIONS

YEA, THE BORING STUFF ...

... but read it, so you don't jack things up!

Please read through these instructions completely to be sure you're comfortable with this easy install process. Also check your TV owner's manual to see if there are any special requirements for mounting your TV.

If you do not understand these instructions or have doubts about the safety of the installation, assembly or use of this product, contact Customer Service at 1-855-428-2490.

⚠ CAUTION: Avoid potential personal injuries and property damage! Manufacturer is not responsible for damage or injury caused by incorrect assembly or use.

⚠ WARNING: Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of the EGTv1 and the display does not exceed 60 lbs. (27.2 kg). Use with heavier televisions may result in instability causing tip over resulting in death or serious injury!

⚠ WARNING: Use this mounting system only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.

⚠ WARNING: Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over onto the child.

⚠ WARNING: Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to the furnishing collapsing or overturning onto a child.

 **NOTE:** The EGTv1 can support screen sizes up to a maximum of 60" diagonal.

 **NOTE:** The EGTv1 has no user serviceable parts.

Don't get it? Call The **ECHOGEAR Team**
1-855-428-2490

WEIGHT RESTRICTIONS



DO NOT EXCEED **60 lbs. (27.2 kg)** for this TV stand.

"You can think about it ... but doooooon't do it."

GRAB YOUR TOOLS

TOY SURPRISE INSIDE THIS BOX

 
**M4
Hex Key**



4 mm


M4

**M5
Hex Key**

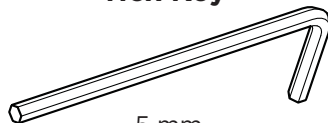


5 mm

 M5



Phillips Screwdriver

 *"Give it back to Phil
when finished"*

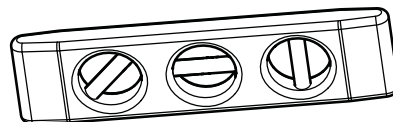


Level

WHAT'S IN THE BOX

! WARNING: This product contains small items that could be a choking hazard if swallowed. Before starting assembly, verify all parts are included and undamaged. If any parts are missing or damaged, do not return the damaged item to your dealer; contact Customer Service. Never use damaged parts!

 **NOTE:** Not all hardware included will be used.

 PARTS FOR STEP 1

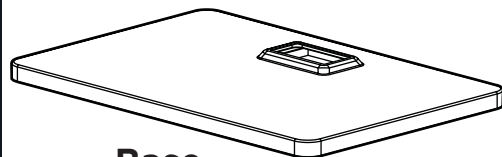


Base

01 x 1




Foot Pad

 02 x 4



Stand

 
03 x 1

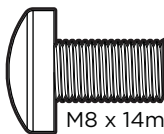

M8 x 14mm

Mounting Screw

 04 x 8

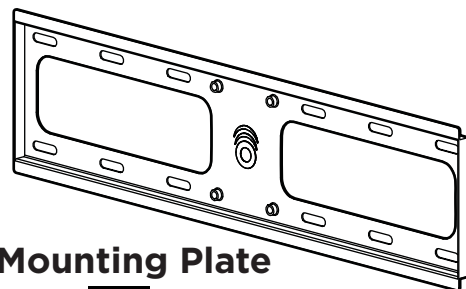


Mounting Plate






05 x 1

PARTS FOR STEP 2

 
TV Screws




**TV
Brackets**
06 x 2

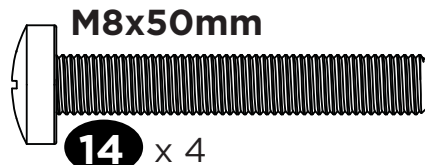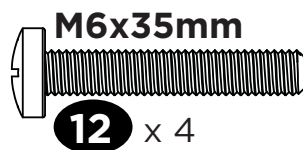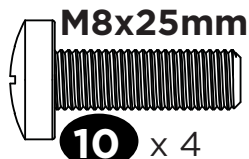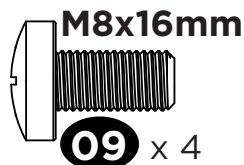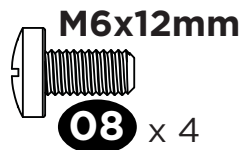     

Washers

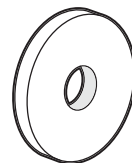 

M4/M5
15 x 4

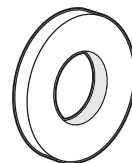 

M6/M8
16 x 4

 
Spacers

2.5mm



17 x 8

22mm

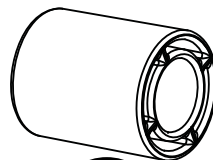

18 x 4

 
You're ready!
LET'S DO THIS!

STEP 1

ASSEMBLE THE TV STAND


STEP 1.1

Install Foot Pads on Base

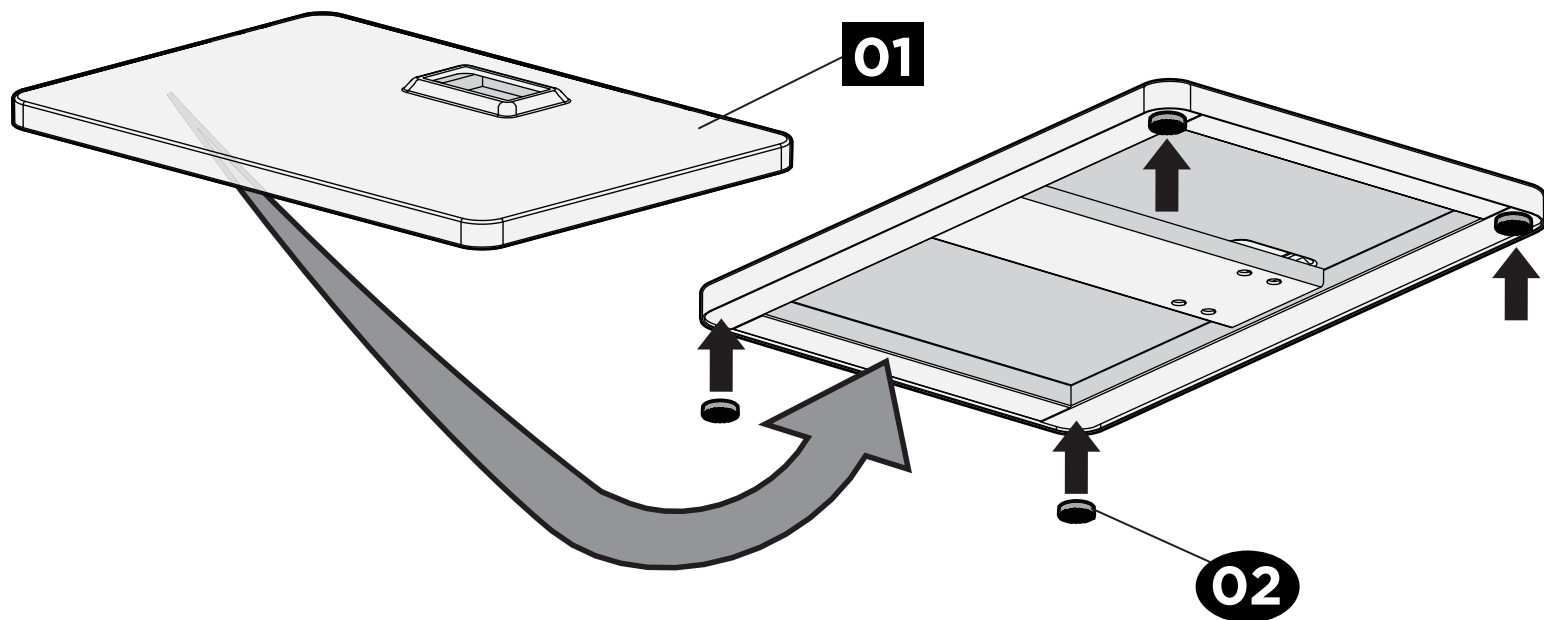


STEP 1.2

 Assemble Post to Base

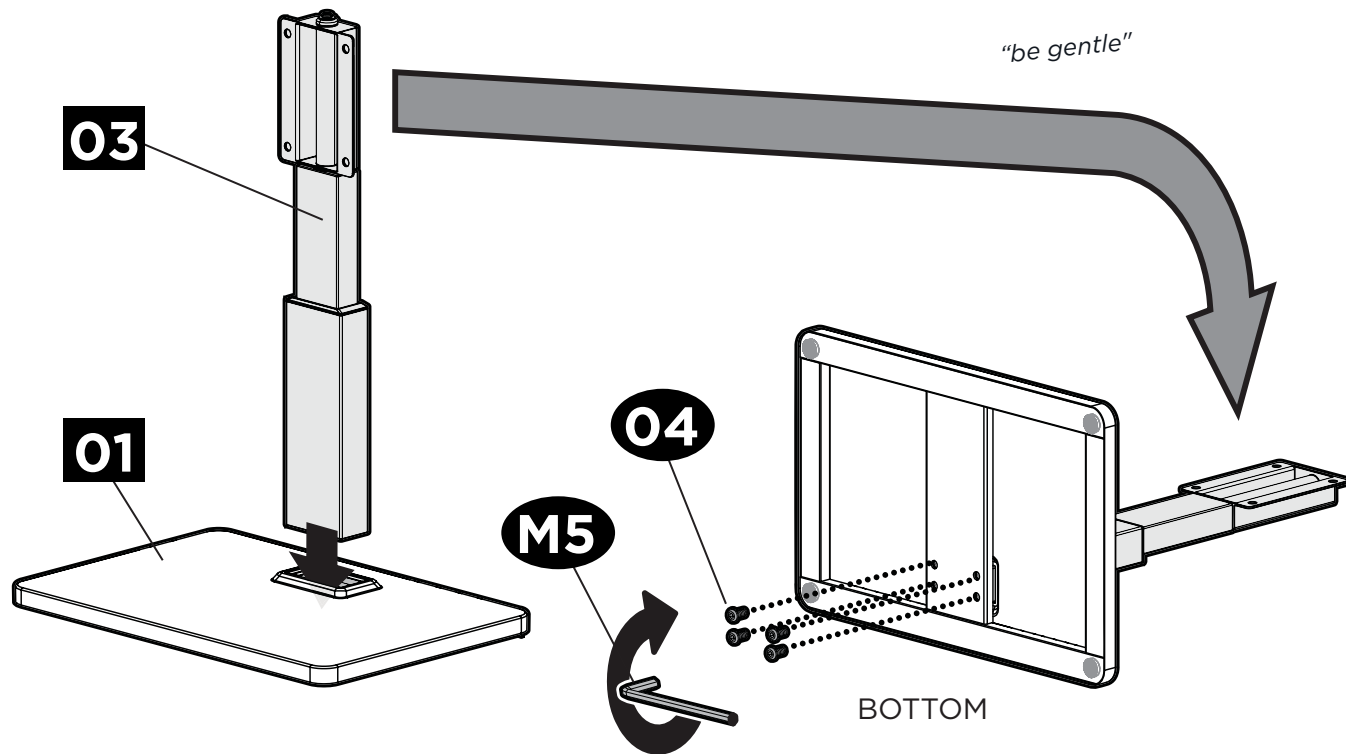

STEP 1.3

 Assemble Mounting Plate to Post

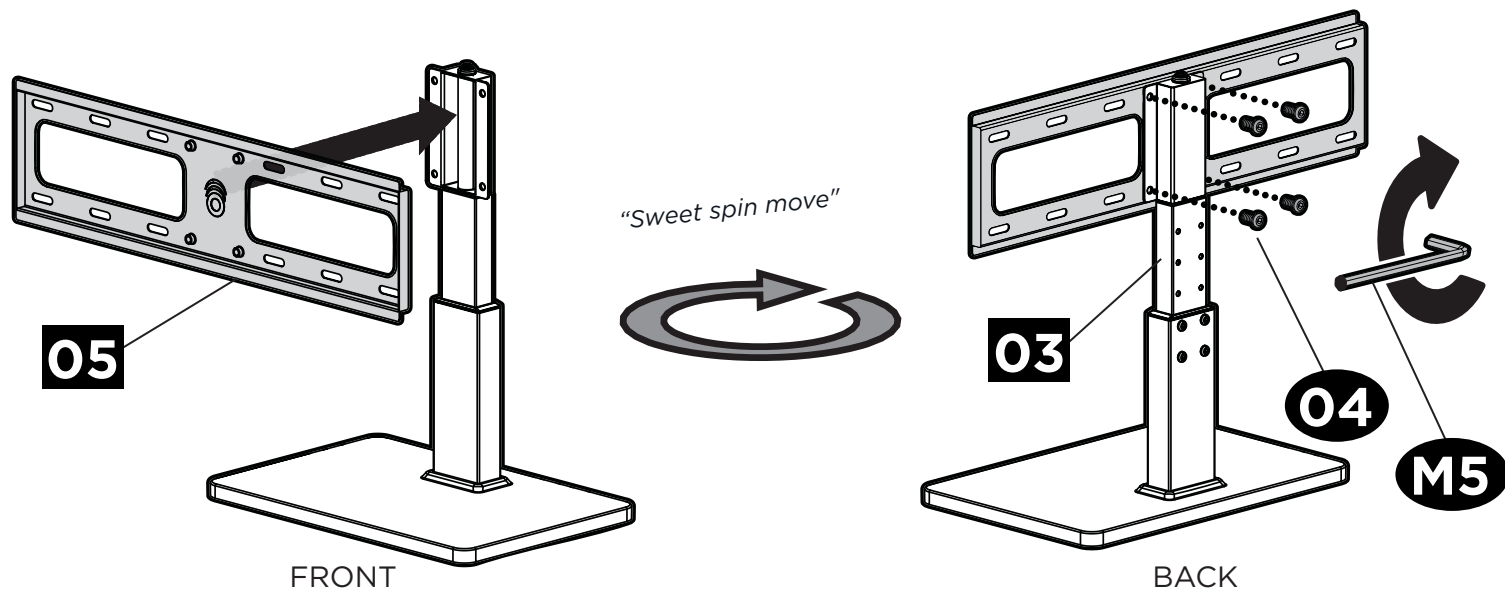


STEP 2

ATTACH TV BRACKETS TO YOUR TV


STEP 2.1

 Position TV Brackets on Your TV

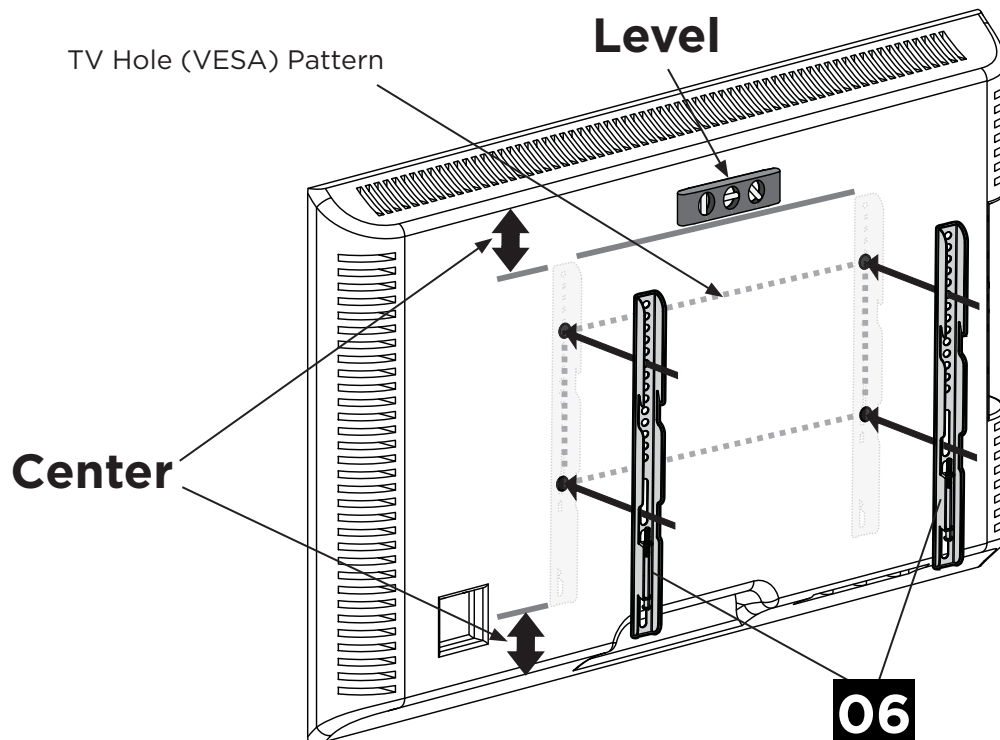


STEP 2.2

 
Secure the TV Brackets

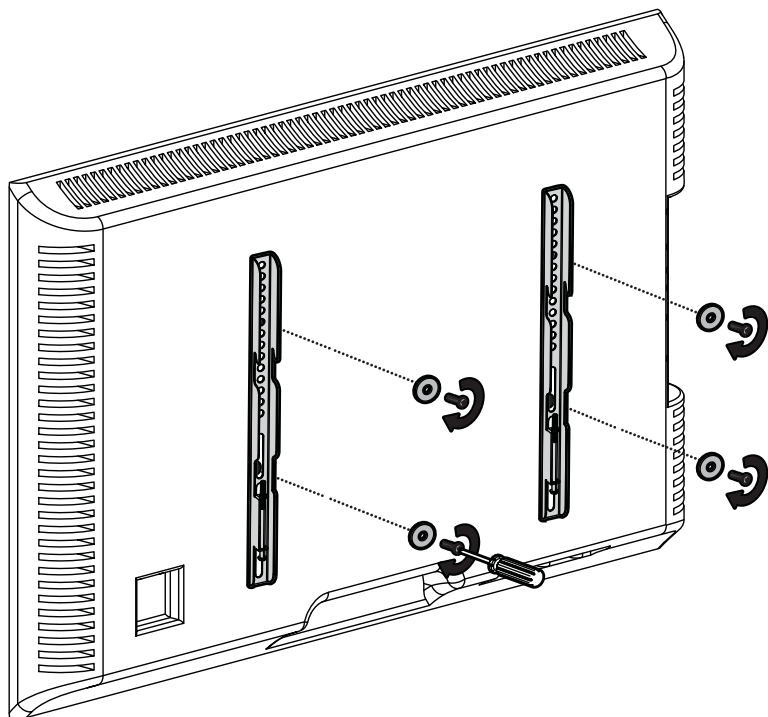

For Flat-backed TVs

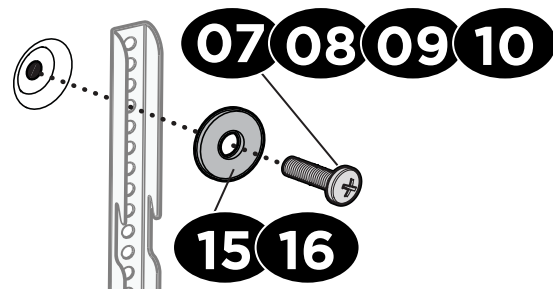 

For irregular-backed (Rounded) TVs

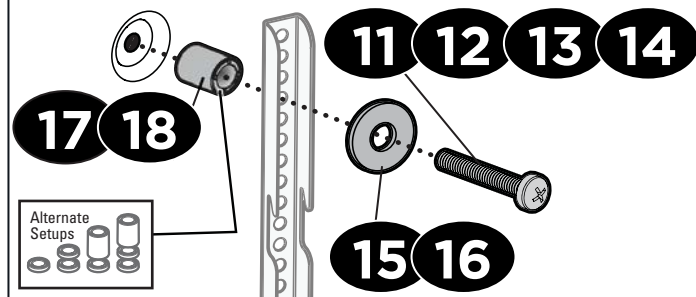 


STEP 3

HANG TV ONTO STAND


STEP 3.1

Adjust to Fit Your TV

 
Remove Screws ⑤

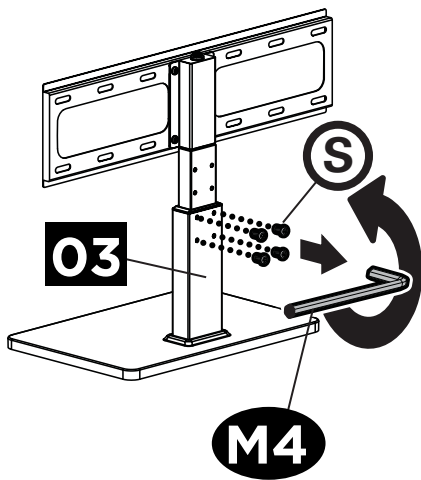

Adjust Height

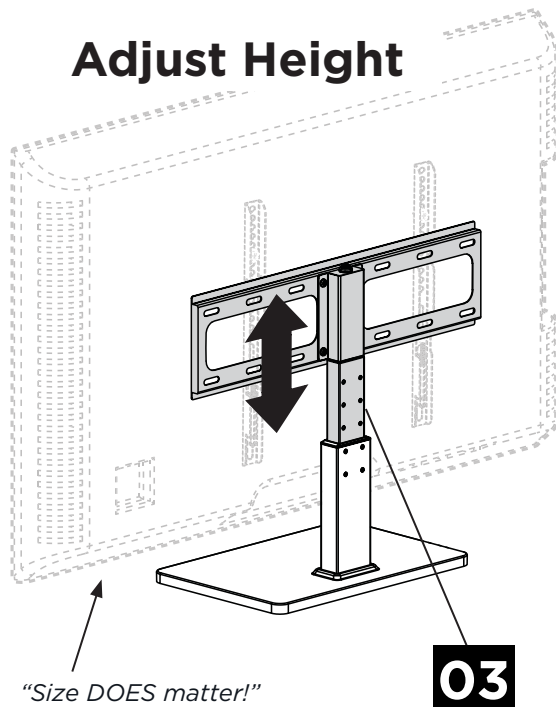 


Reinstall Screws ⑤

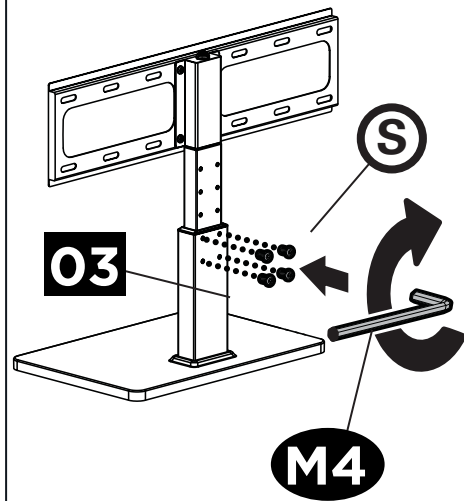 


STEP 3.2

 Hang The TV

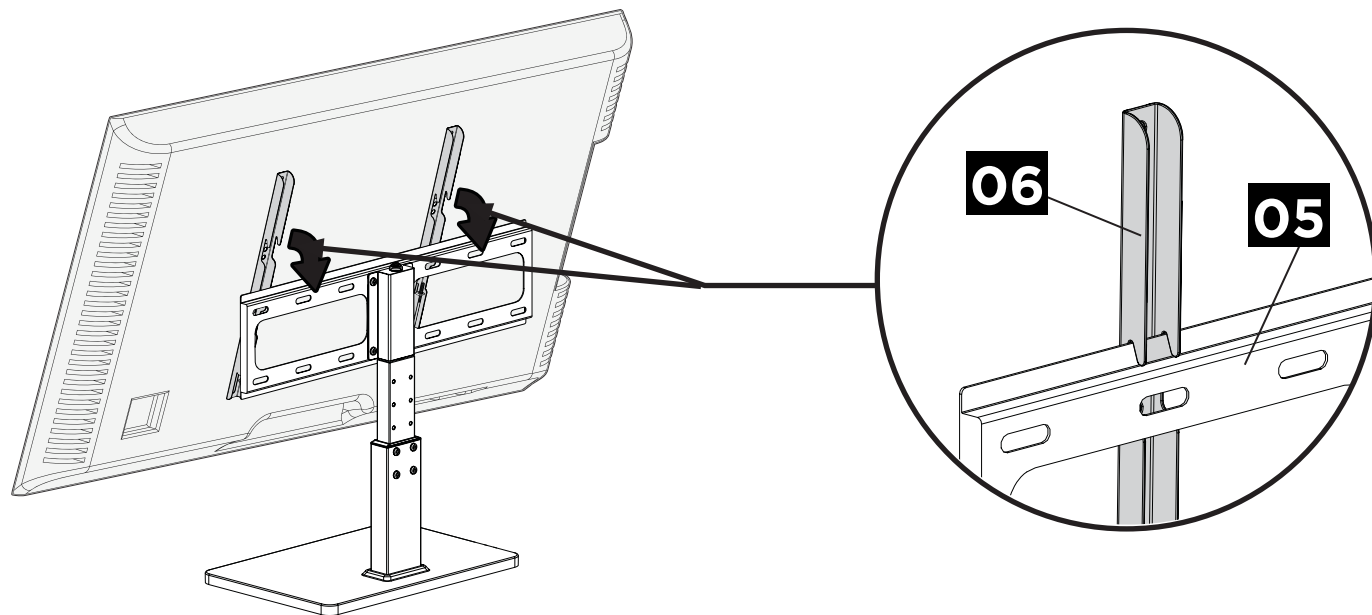

STEP 3.3

 Secure The TV

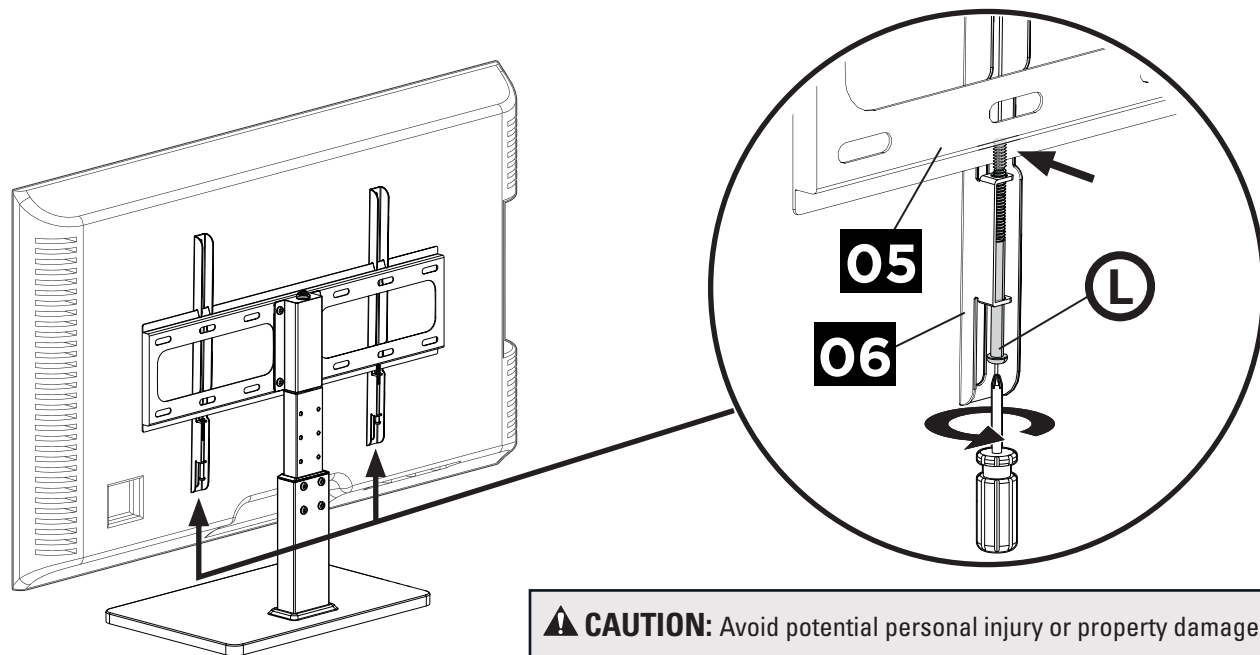


⚠ CAUTION: Avoid potential personal injury or property damage!


Make sure your locking screws **(L)** are tightened **BEHIND** the mounting plate **05**, so the TV is securely fastened in place.

TO REMOVE YOUR TV

 Loosen Screws ⑤

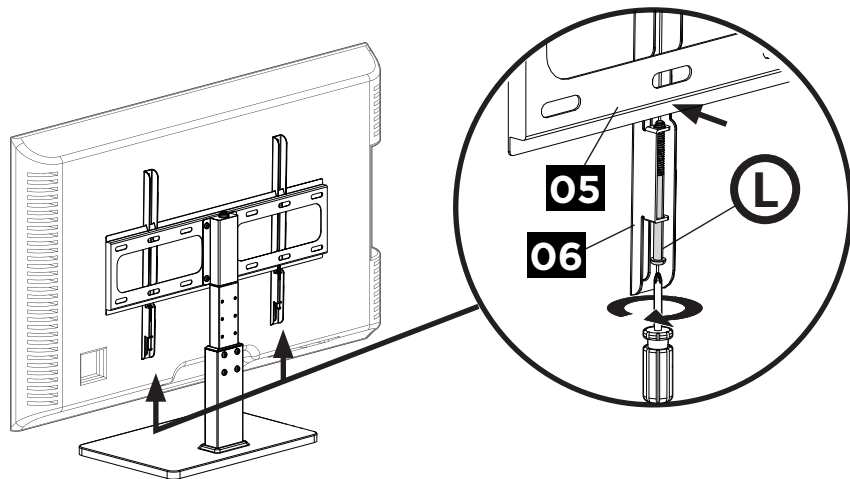

Remove TV

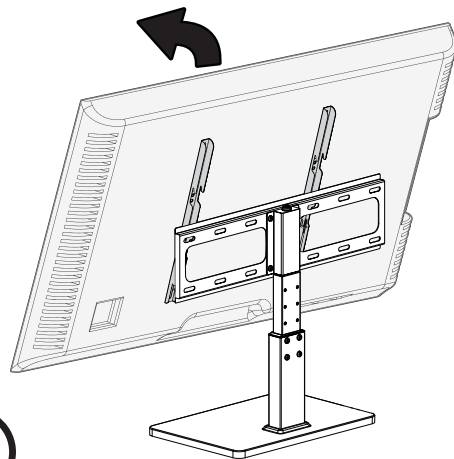 

HEAVY! You may need assistance with this step.

"Grab that cheapskate that owes you, dude!"

Milestone AV Technologies and its affiliated corporations and subsidiaries (collectively, “Milestone”), intend to make this manual accurate and complete. However, Milestone makes no claim that the information contained herein covers all details, conditions, or variations. Nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Milestone makes no representation of warranty, expressed or implied, regarding the information contained herein. Milestone assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

©2017 Milestone AV Technologies. All rights reserved. ECHOGEAR is a Milestone brand. ECHOGEAR and the ECHOGEAR logo are trademarks of Milestone.

Made in China.



***Confuzzled?* Call the ECHOGEAR Team:**



1-855-428-2490



helpmehelpyou@ECHOGEAR.com

“Wanna show off your hard work? Share a picture of your completed project with **#YourGearUpgraded**.

Who knows, it might not be as bad as you thought”