
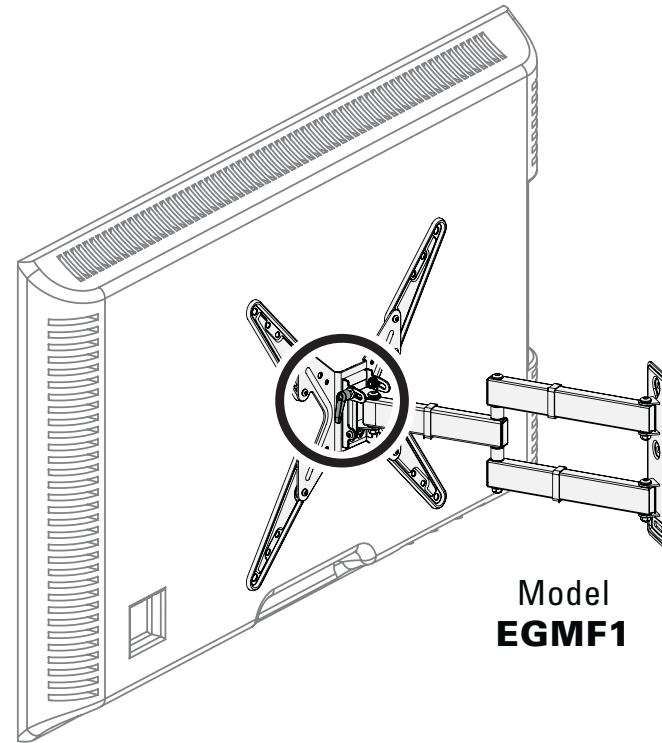


## EASY ADJUST TILT STEPS

For models EGLF1 and EGMF1

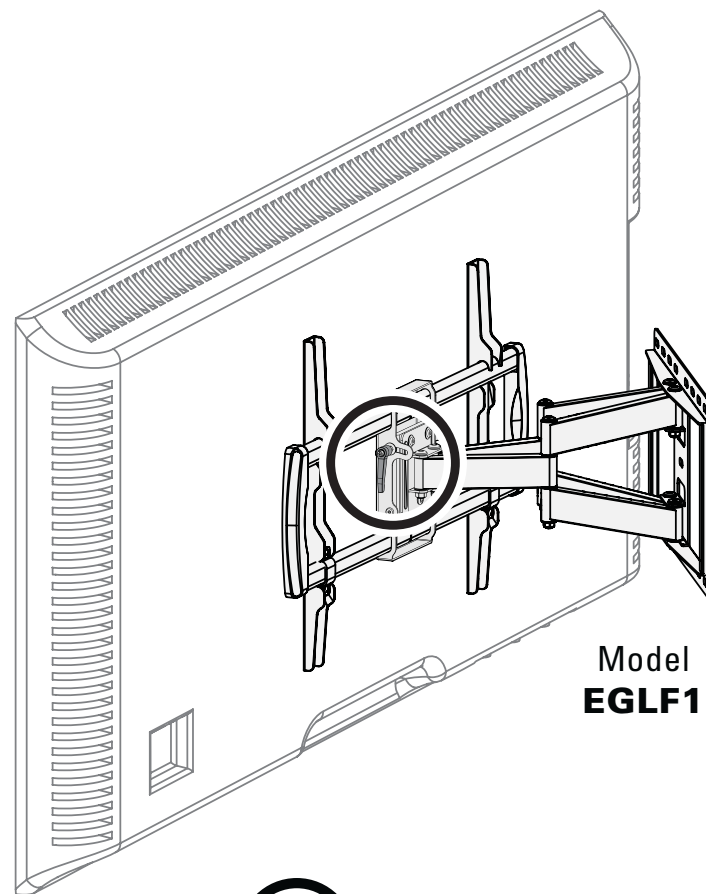

**Your tilt adjustment lever incorporates a spring-loaded mechanism.**

**To adjust the tilt**, first rotate (loosen or tighten) the tilt lever as far as you can, then:

- (a)** Pull and hold the lever outward,
- (b)** Rotate the lever in the opposite direction,
- (c)** Release the lever back into position,
- (d)** Rotate the lever to tighten or loosen.

Repeat as needed.

**LOOSEN:** to adjust the TV tilt position.

**TIGHTEN:** when you find your best tilted angle and you want to set the TV in place.

