


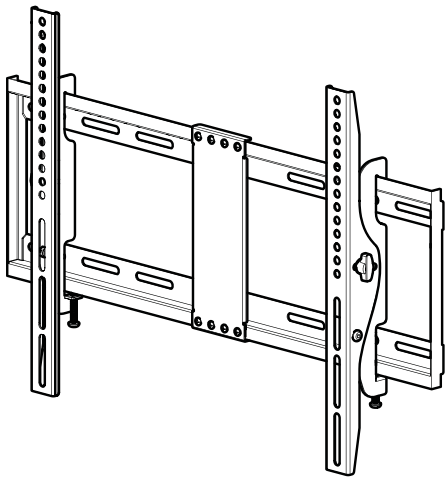

LARGE TILT
TV WALL MOUNT

For 32"-70"
(81.3-177.8 cm)
TVs

Model EGLT1




Does your TV weight *more*
than 125 lbs. (57 kg) including
accessories?
No — Perfect!
Yes — This mount is **NOT** compatible.



⚠ WARNING: Exceeding the weight
capacity can result in serious personal injury
or damage to equipment! It is the installer's
responsibility to make sure the weight of the
TV (with accessories) does not exceed 125 lbs
(57 kg).

What is your wall made of?

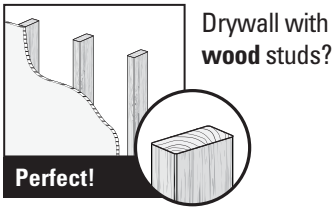


Please read through these instructions completely to be sure you're comfortable with this
easy install process. Also check your TV owner's manual to see if there are any special
requirements for mounting your TV.

If you do not understand these instructions or have doubts about the safety of the
installation, assembly or use of this product, contact Customer Service at 1-855-428-2490.


⚠ CAUTION: Avoid potential personal injuries and property damage!

- This product is designed for use in wood stud walls - DO NOT install into drywall alone
- The wall must be capable of supporting five times the weight of the TV and mount combined
- Do not use this product for any purpose not explicitly specified by manufacturer
- Manufacturer is not responsible for damage or injury caused by incorrect assembly or use





Tools:

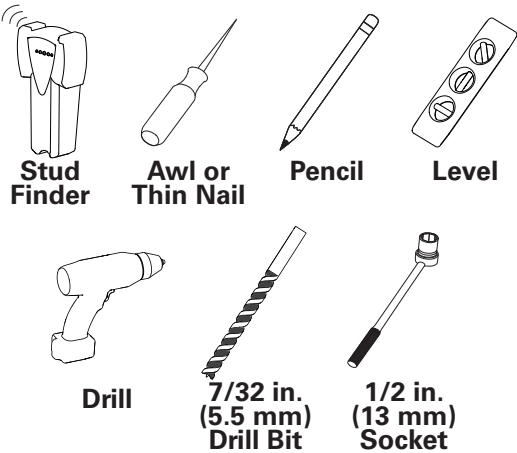

⚠ WARNING: This
product contains small
items that could be
a choking hazard if
swallowed.
Before starting
assembly, verify all
parts are included and
undamaged. If any parts
are missing or damaged,
do not return the
damaged item to your
dealer; contact Customer
Service. Never use
damaged parts!

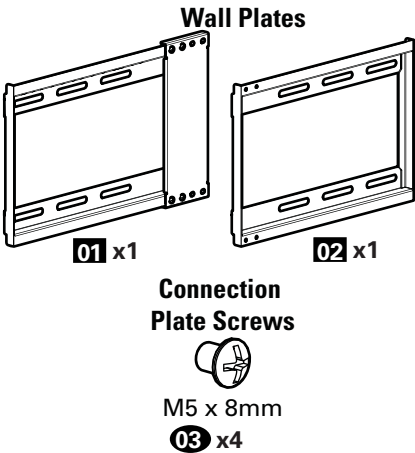


Hardware

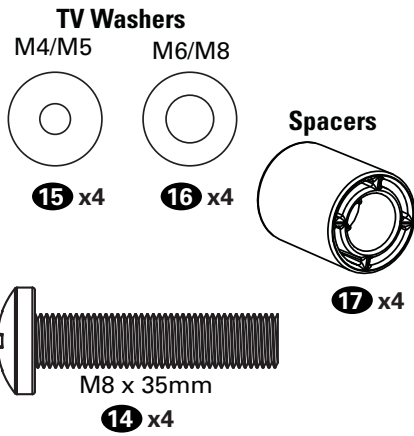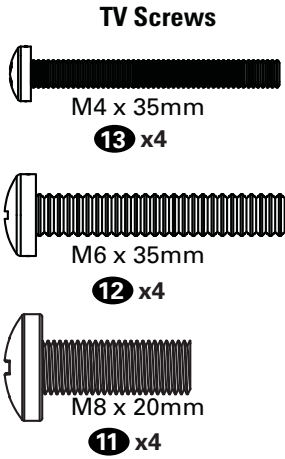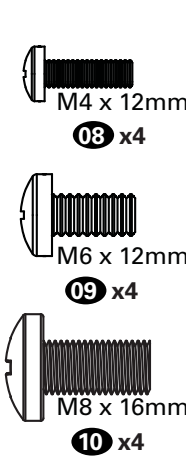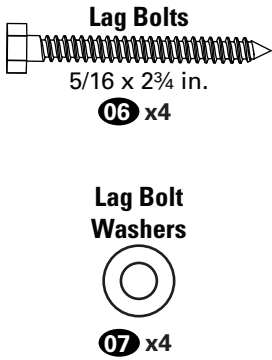

1-1 Select TV Screw Diameter


Hand thread screws into the threaded inserts
on the back of your TV to determine which
screw diameter (M4, M6, or M8) to use.

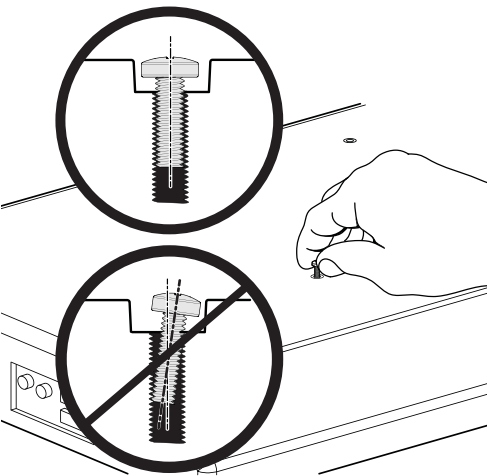

1-2 Select TV Screw Length


If your TV has a flat back AND you want your TV closer to
the wall, use the shorter screws (a).
Use the spacers and longer screws (b) to accommodate:

- Round/irregular back TVs
- TVs with inset mounting holes
- Extra space needed for cables

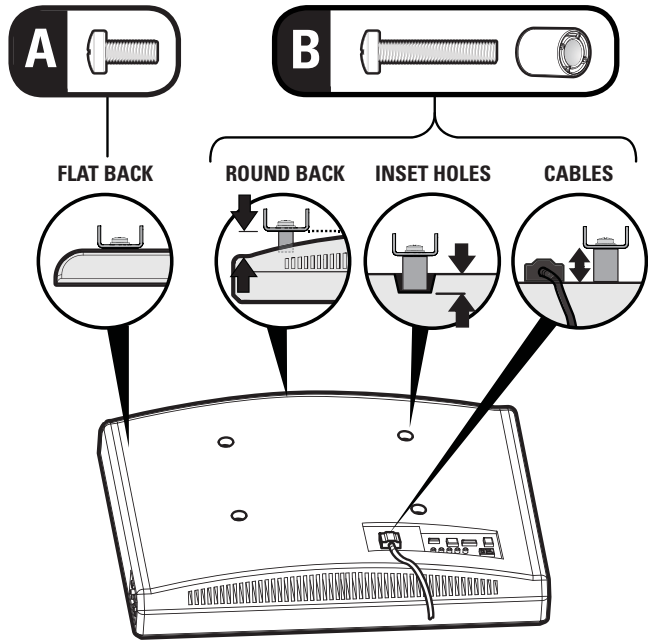

Standard configurations
are shown. For special
applications, or if you
are uncertain about your
hardware selection,
contact Customer Service
at 1-855-428-2490.


⚠ CAUTION:
Verify adequate thread
engagement with the screw or
screw/spacer combination.
- Too short will not hold the TV.
- Too long will damage the TV.

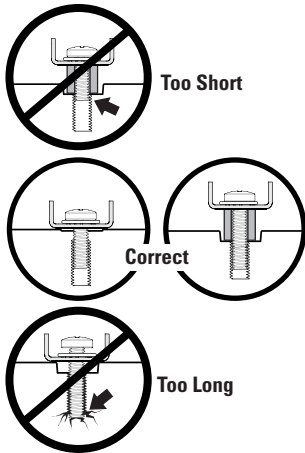


1-3 Attach the TV Bracket

Position your TV
bracket configuration
(A or B) over your TV
hole pattern - making
sure the bracket is
centered over the
TV hole pattern and
level. Secure bracket
using your screw/
washer (A-Flat Back)
or spacer/screw/
washer (B-Round
Back / Extra Space)
selection.

⚠ CAUTION:
Ensure TV bracket
is securely fastened
before moving on to
the next step.

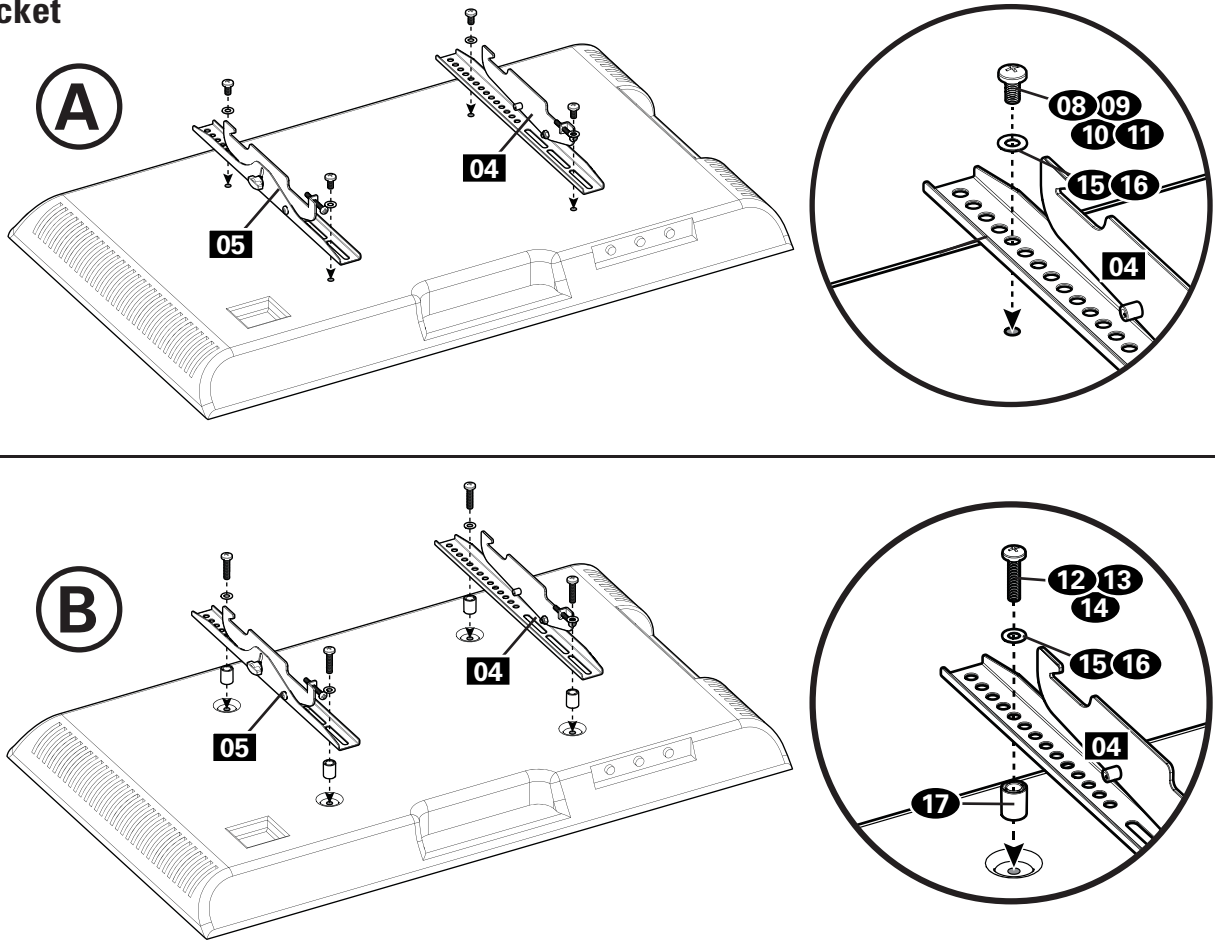

Step 2 Assemble Wall Plate

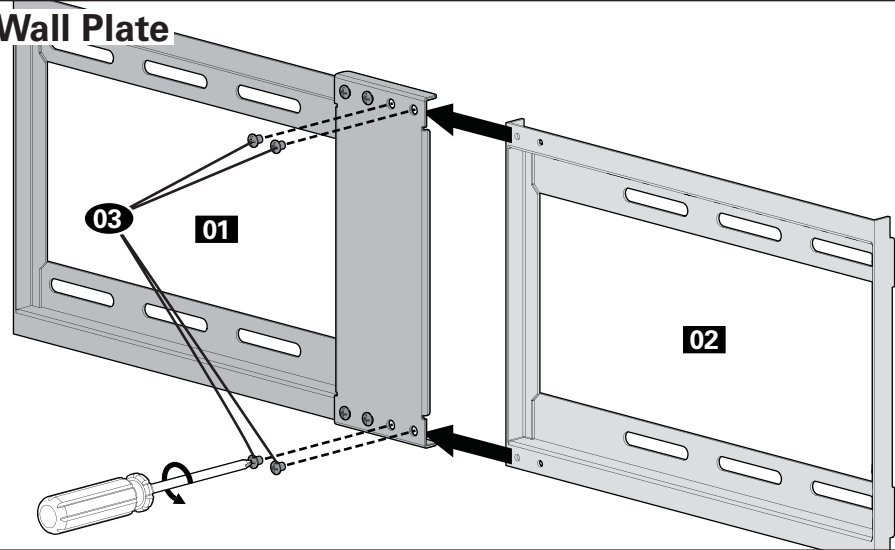


Assemble the wall plate sections **01** and **02** with the connection plate screws **03**.

Step 3 Wood Stud

- ⚠ CAUTION:** Avoid potential personal injuries and property damage!
- Drywall covering the wall must not exceed 5/8 in. (16 mm)
 - Minimum wood stud size: common 2 x 4 in. (51 x 102 mm) nominal 1½ x 3½ in. (38 x 89 mm)
- ⚠ CAUTION:** Avoid potential personal injury or property damage! All lag bolts **06** MUST BE firmly tightened to prevent unwanted movement of the wall plate assembly.
- ⚠ CAUTION:** Ensure the wall plate assembly is securely fastened to the wall before continuing on to the next step.


3-1

Locate your stud. Verify and mark the center of the stud by finding the stud edges using an awl, a thin nail, or an edge-to-edge stud finder.

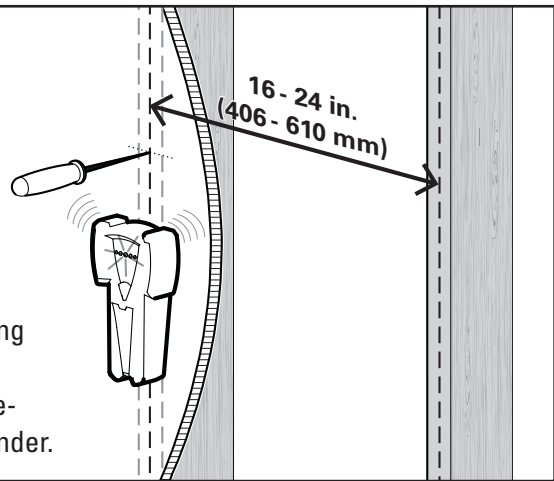

3-2

Position the wall plate assembly at your desired height and line up the holes with your stud center line. Level the wall plate and mark the holes.

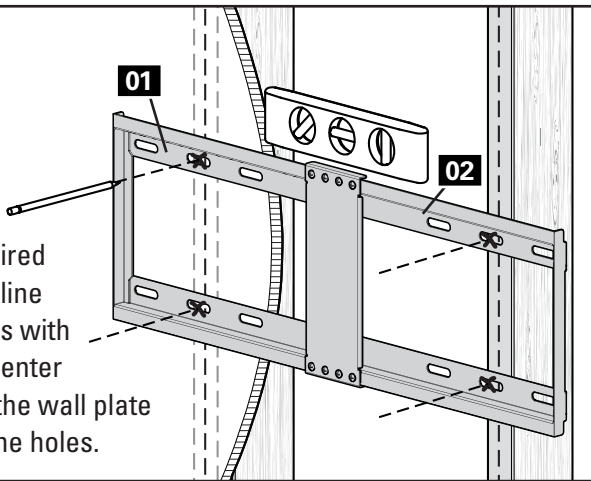


3-3

Drill pilot holes using a 7/32 in. (5.5 mm) diameter drill bit.


❗ IMPORTANT: Be sure to drill into the center of the stud.

❗ IMPORTANT: Pilot holes must be drilled to a depth of 3 in. (75 mm).

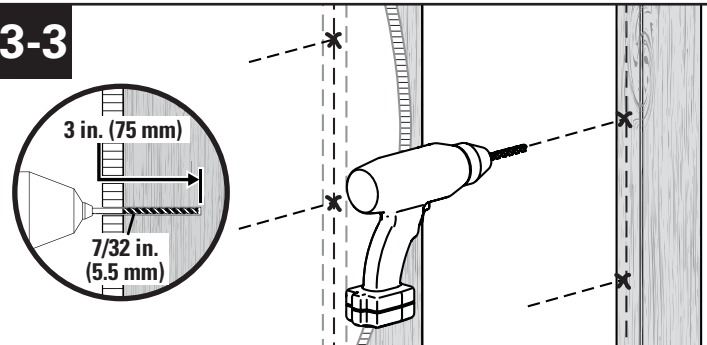


3-4

Install the wall plate assembly using lag bolts **06** and washers **07**. Tighten the lag bolts **06** only until the washers **07** are pulled firmly against the wall plate assembly.

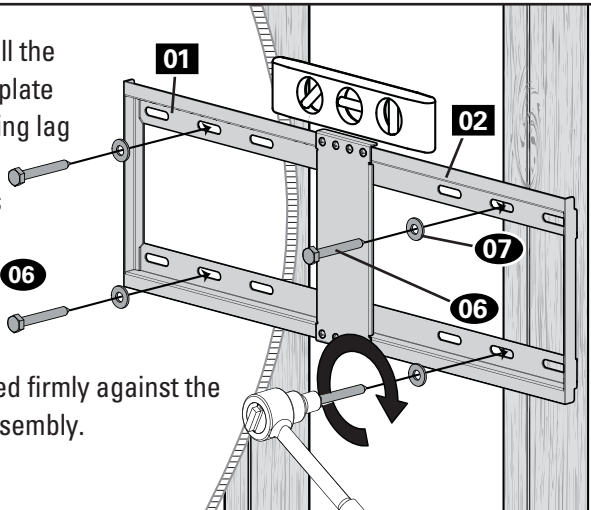


Step 4 Tighten Knobs

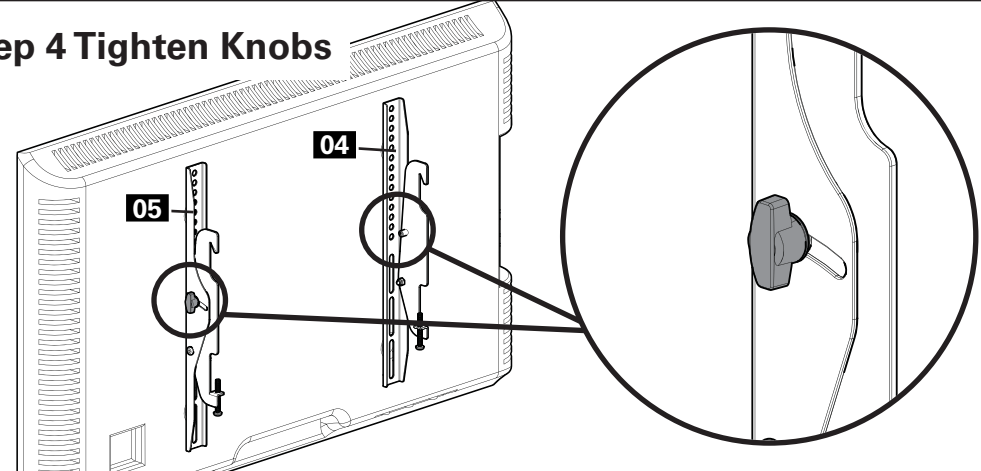

Check knobs on brackets **04** and **05** to ensure that they are tight before hanging TV. If you desire a degree of tilt, loosen the knobs, adjust the tilt and retighten.

NOTE: It will be necessary to remove the TV from the wall plate assembly to make tilt adjustments.


Step 5 Hang TV

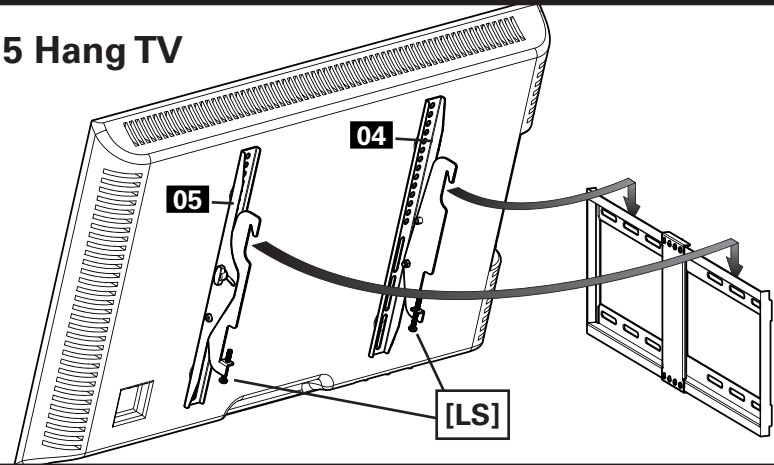

Unscrew locking screws **[LS]** on brackets **04** and **05** enough to clear the bottom of the wall plate assembly.

Hang the TV with brackets **04** and **05** onto the wall plate assembly.

Step 6 Secure TV

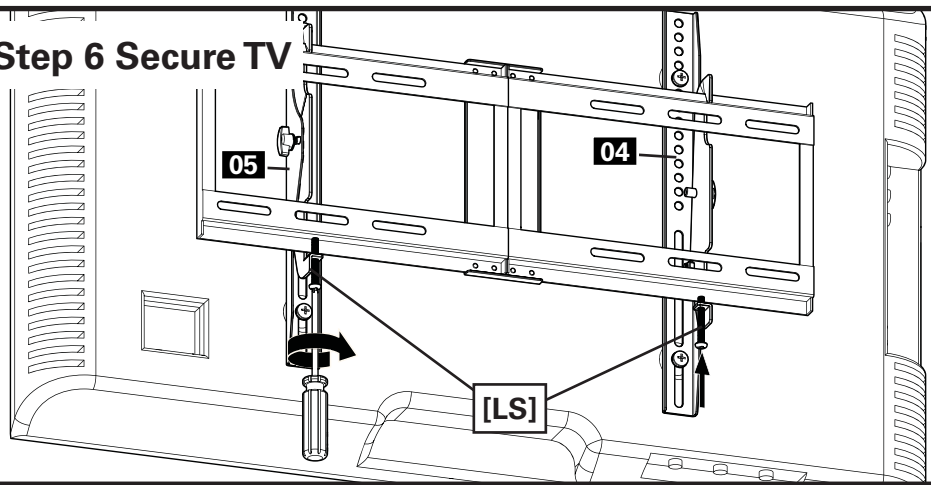

Tighten the locking screws **[LS]** on brackets **04** and **05** to secure the TV to the wall plate assembly.

Milestone AV Technologies and its affiliated corporations and subsidiaries (collectively, “Milestone”), intend to make this manual accurate and complete. However, Milestone makes no claim that the information contained herein covers all details, conditions, or variations. Nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Milestone makes no representation of warranty, expressed or implied, regarding the information contained herein. Milestone assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

©2015 Milestone AV Technologies. All rights reserved. ECHOGEAR is a Milestone brand. ECHOGEAR and the ECHOGEAR logo are trademarks of Milestone.

Made in China.

Milestone Global Headquarters • 6436 City West Parkway • Eden Prairie, MN 55344 USA