


#YourGearUpgraded

FULL MOTION
TV WALL MOUNT
Model EGMF1
INSTRUCTION MANUAL

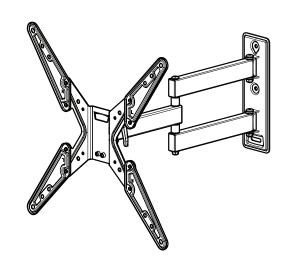

IMPORTANT SAFETY INSTRUCTIONS. READ ENTIRE MANUAL PRIOR TO USE. SAVE THESE INSTRUCTIONS

YEA, THE BORING STUFF ... but read it, so you don't jack things up!

Please read through these instructions completely to be sure you're comfortable with this easy install process. Also check your TV owner's manual to see if there are any special requirements for mounting your TV.

If you do not understand these instructions or have doubts about the safety of the installation, assembly or use of this product, contact The Echogear Pros at 1-855-428-2490.

A CAUTION: Avoid potential personal injuries and property damage!

- ▶ This product is designed for use in wood stud DO NOT install into drywall alone
- ▶ The wall must be capable of supporting five times the weight of the TV and mount combined
- ▶ Do not use this product for any purpose not explicitly specified by manufacturer
- Manufacturer is not responsible for damage or injury caused by incorrect assembly or use

WEIGHT RESTRICTIONS



Your TV (including accessories)
CANNOT EXCEED **60 lbs.**(27 kg) for this mount.

"You can think about it ... but doooon't do it."

If your TV weighs more, this mount is NOT compatible. Visit echogear.com to find a compatible mount.

the maximum weight indicated. This mounting system is intended for use only with the maximum weights indicated. Use with products heavier than the maximum weights indicated may result in collapse of the mount and its accessories, causing possible injury.

VERIFY YOUR WALL CONSTRUCTION

ACAUTION:

DO NOT install into drywall alone

... unless you WANT to watch your TV fall and crash onto the floor.

Phillips Screwdriver




Drill Bit




UUUUHHH?!? Unsure?

Contact The Echogear Pros at 1-855-428-2490 or www.echogear.com

GRAB YOUR TOOLS

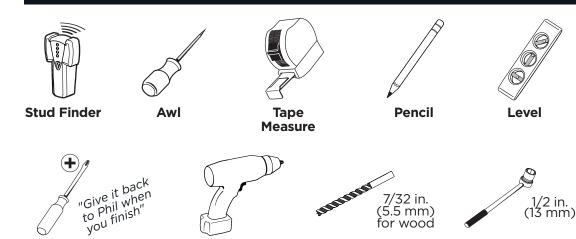

Electric Drill

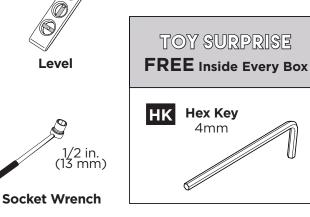

ECHOGEAR SATISFACTION GUARANTEE:

We're driven to give DIYers an awesome install experience. We stand behind everything we make because you deserve the best entertainment experience without sacrificing quality and spending your whole paycheck.

Guess what? We'll help you through the entire process, too.

Why? Because we like to help and it's our passion to provide authentic service. We won't leave you hanging, no matter what.

Our U.S. based Echogear Pros answer the phone in all days ending in Y. That means availability to try and stump our expert staff 7 days a week.


Call us if you...


- 1 Have any questions before, during, or after install.
- 2 Need different hardware to fit your TV model.
- 3 Just need someone to chat with. We're here for you.


WHAT'S IN THE BOX

 
▲ WARNING: DON'T FEED TO CHILDREN — This product contains small items that could be a choking hazard if swallowed. Before starting assembly, verify all parts are included and undamaged. If any parts are missing or damaged, do not return the damaged item to your dealer; contact Customer Service. Never use damaged parts!

NOTE: Not all hardware included in this kit will be used.

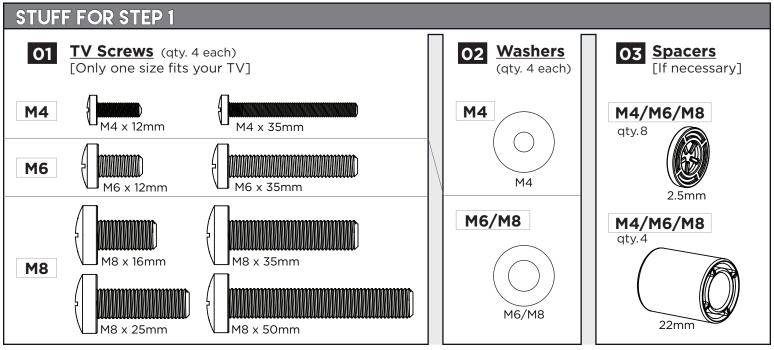

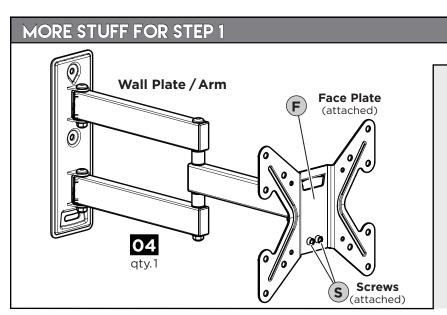

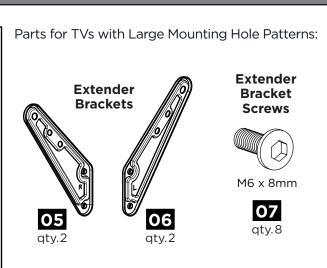




ATTACH THE TV BRACKET TO YOUR TV


STEP 1.1 Select TV Screws

Only one screw size fits your TV.

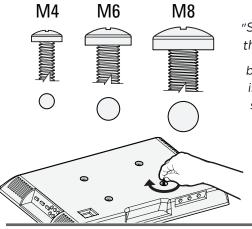



"Suggested uses for the extra screws:


board game pieces, industrial jewelry, sweet corn holders, musical instruments like maracas or 'monsoon' sticks, stocking stuffers, currency (not most countries) ..."

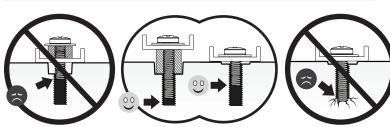


STEP 1.2 Select Spacers (if needed)

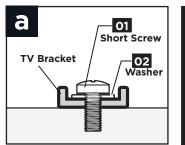

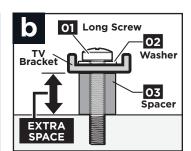

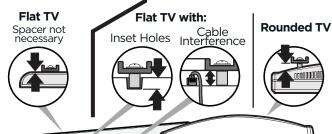


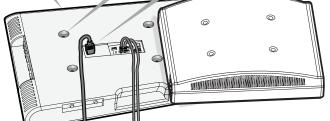


STEP 1.3 Remove


Remove Face Plate F


STEP 1.4 Measure TV Hole Pattern

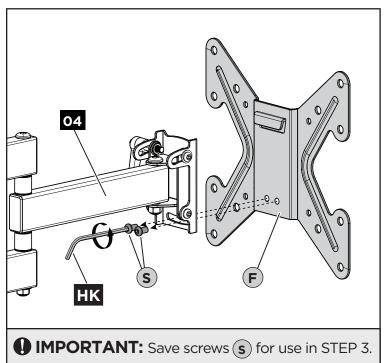

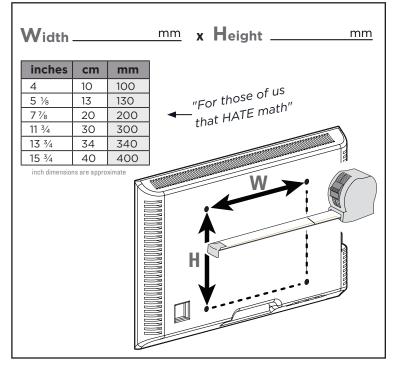


STEP 1.5 Configure TV Bracket to Fit Your TV Hole Pattern

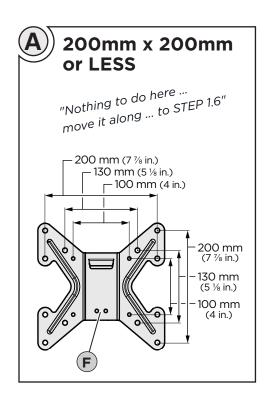

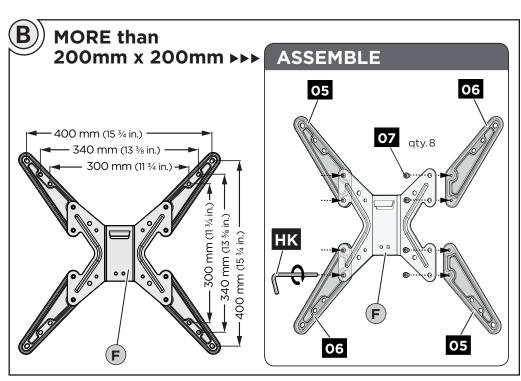


STEP 1.6 Secure the TV Bracket to Your TV

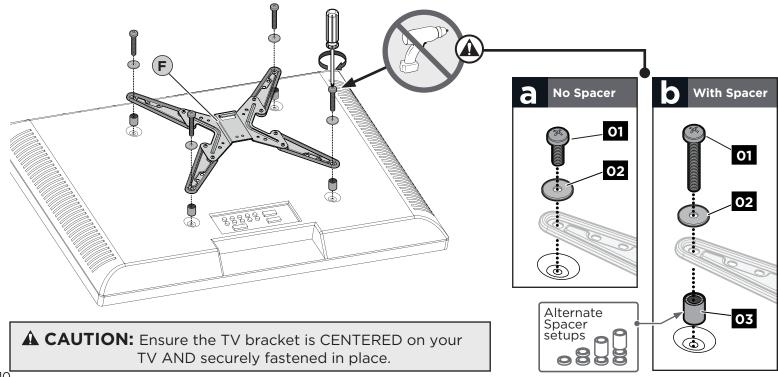

INSTALL THE WALL PLATE


A CAUTION:

Avoid potential personal injuries and property damage!

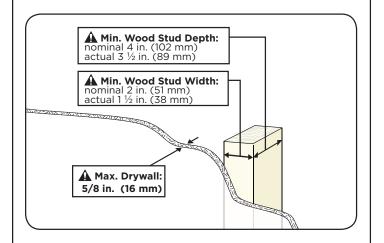

Drywall covering the wall must not exceed 5/8 in. (16 mm).

Minimum wood stud size: nominal 2 x 4 in. (51 x 102 mm) actual $1\frac{1}{2}$ x $3\frac{1}{2}$ in. (38 x 89 mm).

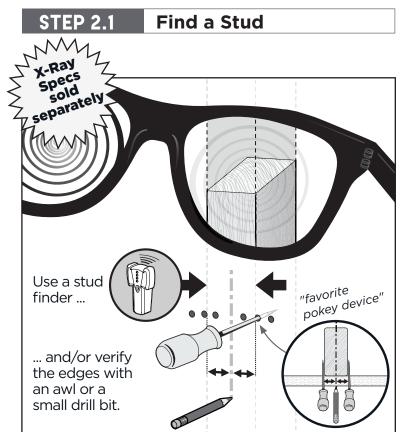



STEP 2.2 Mark


STEP 2.3

Drill

STEP 2.4 Secure Wall Plate

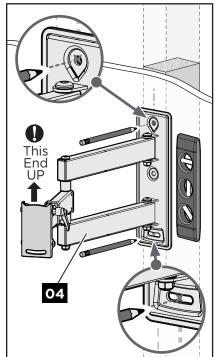

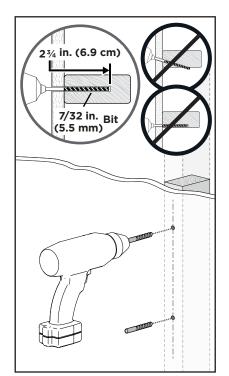

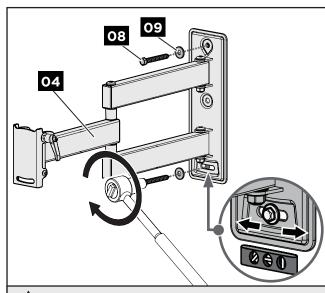


CAUTION: Avoid potential personal injury or property damage! Lag screws **08** MUST BE firmly tightened to prevent unwanted movement of the wall plate/arm **04**.

HANG YOUR TV




HEAVY! You may need assistance with this step.

"Ask that friend of yours that yammers on about CrossFit"

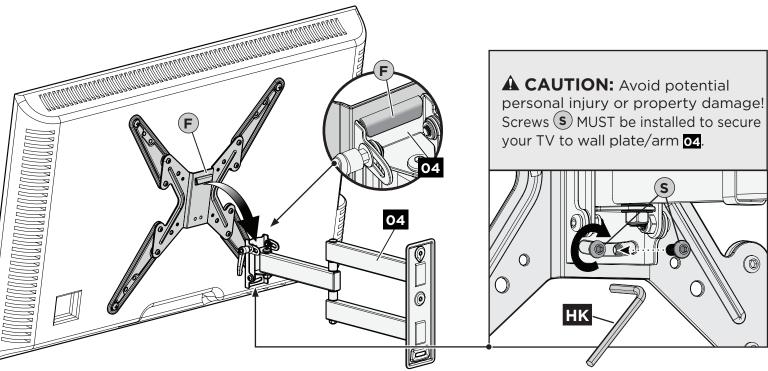


ADJUSTMENTS



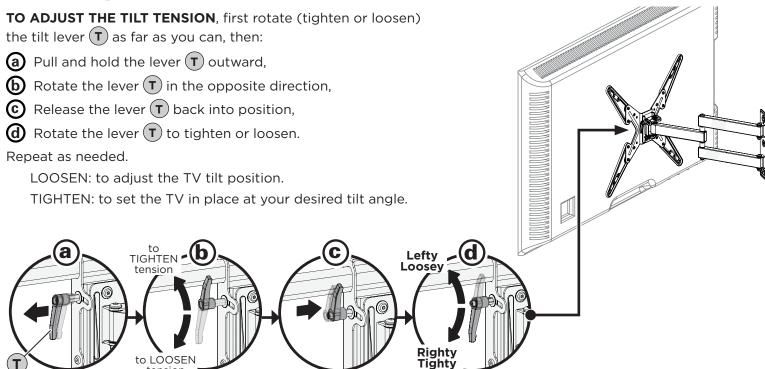

LEVEL (

- 1. Loosen the two screws s on the rear of arm 04, using the hex key HK.
- 2. Level your TV.
- 3. Retighten screws **S** to secure in place.

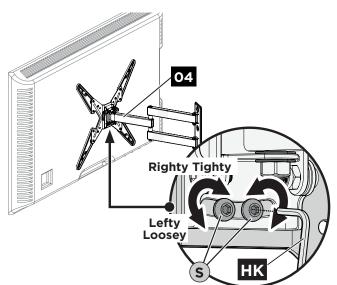


REMOVE YOUR TV





HEAVY! You may need assistance with this step.

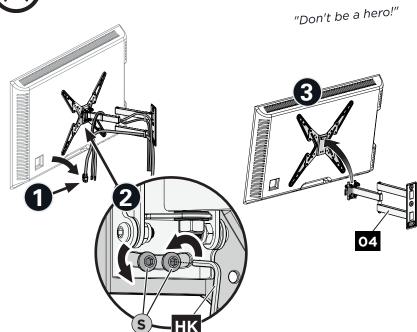



"Wanna show off your hard work? Share a picture of your completed project with #YourGearUpgraded. Who knows, it might not be as bad as you thought"

Confuzzled? Contact the ECHOGEAR Pros:







Milestone AV Technologies and its affiliated corporations and subsidiaries (collectively, "Milestone"), intend to make this manual accurate and complete. However, Milestone makes no claim that the information contained herein covers all details, conditions, or variations. Nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Milestone makes no representation of warranty, expressed or implied, regarding the information contained herein. Milestone assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

©2018 Milestone AV Technologies, All rights reserved, ECHOGEAR is a Milestone brand. ECHOGEAR and the ECHOGEAR logo are trademarks of Milestone.

Made in China.

Milestone Global Headquarters • 6436 City West Parkway • Eden Prairie, MN 55344 USA

6901-602254 00